





### (ENGLISH) FENIX C7 FLASHLIGHT

- @ 3000 lumens maximum output 470 meters maximum beam distance O A Luminus SST70 LED with a lifespan of 50,000 hours.
- Included a 5000mAh rechargeable Li-ion battery.
- On/off, output selection with the side switch.
- USB Type-C rechargeable, 3 hours for full charging
- Magnetic base for hands-free use.
- Battery level indication
- O Made of durable A6061-T6 aluminum
- Premium type HAIII hard-anodized anti-abrasive finish
- O Size: 5.87" x 1.57" x 1.06" / 149 x 40 x 27 mm.
- O Weight: 6.07 oz / 172 g (excluding battery).

## **OPERATING INSTRUCTIONS**

### On/Off

With the light switched off, press and hold the side switch for 0.5 seconds to enter general mode. With the light switched on, press and hold the side switch for 1.2 seconds to enter flash mode

With the light switched on, press and hold the side switch for 0.5 seconds to turn off the light.

### Mode Switching

With the light switched on, press and hold the side switch for 1.2 seconds to switch between general mode and flash mode.

#### **Output Selection**

- In general mode, single click the side switch to cycle through  $Eco \rightarrow Low \rightarrow Med \rightarrow High \rightarrow Turbo$ .
- In flash mode, single click the side switch cycle through Strobe  $\rightarrow$  SOS.

#### Intelligent Memory Circuit

The light memorizes the last selected output on general mode. When turned on again the previously used output will be recalled. Each time the light will enter strobe when flash mode is selected.

#### Lock/Unlock

Lock: with the light switched off, double click the switch within 0.5 seconds to lock the light, the light will blink twice on Eco to indicate locked status.

Unlock: with the light locked, double click the switch within 0.5 seconds, the light will be unlocked and activated on Eco. \*In locked status, clicking or pressing the switch will activate 2 one-second blinks on Eco to indicate locked status

### **TECHNICAL PARAMETERS** GENERAL MODE

ANSI/PLATO FL1								
ANSI/PLATO FLT	Turbo	High	Me	d	Low	Eco	Strobe	SOS 100 lumens
シゲ OUTPUT	3000 lumens	1400 lumens	400 lur	nens	100 lumens	30 lumens	3000 lumens	100 lumens
○ RUNTIME	1 hour*	2 hours	7 hou	ırs	29 hours	68 hours	1	1
DISTANCE	470 meters	300 meters	160 me	eters	80 meters	45 meters	1	/
<b>★ INTENSITY</b>	55200 candela	22500 candela	6400 ca	ndela	1600 candela	520 candela	J	/
✓ IMPACT RESISTANCE					1 meter			
~¥~ SUBMERSIBLE					IP68			

Note: According to the ANSI/PLATO FL1 standard, the above specifications are from the results produced by Fenix through its laboratory testing using one Fenix ARB-L21-5000 rechargeable Li-ion battery under the temperature of 21±3°C and humidity of 50% - 80%. The true performance of this product may vary according to different working environments and the actual battery used. \*The Turbo output is measured in a total of runtime including output at reduced levels due to temperature or protection mechanism in the design.

#### **BATTERY SPECIFICATIONS**

Туре	Dimension	Nominal Voltage	Usability	
Fenix ARB-L21 Series	21700	3.6V/3.7V	Recommended	√.
Rechargeable Battery (Li-ion)	21700	3.6V/3.7V	Caution	!

\* 21700 Li-ion batteries are powerful cells designed for commercial applications and must be treated with caution and handled with care. Only use quality batteries with circuit protection will reduce the potential for combustion or explosion; but cell damage or short circuiting are potential risks the user assumes.

#### **BATTERY REPLACEMENT**

Unscrew the tail capand insert the battery with the anode side (+) towards the light head, then screw thetail capback on

#### CHARGING

© Reveal the USB Type-C charging port and plug the USB A socket of the charging cable into an electrical outlet, then connect the USB Type-C socket of the charging cable to the light.

The normal charging timeis approximately 3 hours from depletion to full charging with the light switched off. When charging, the flashlight can be normally used on Eco mode, but charging time will be prolonged. The indicator will display red while chargingand will turn green when

Once charging is completed, be sure to replace the USB cap to maintain the dustproof and waterproof ability.

\* The charging input is 5V/2A, the adapter and mobile power bank of this specification can be used to charge the flashlight. \*Recharge a stored headlamp every four months to maintain optimal Li-ion battery performance.

# BATTERY LEVEL INDICATION

With the light switched off, single clickthe switchto check the battery status, the indicator will last for 3 seconds.

FLASH MODE

Green light on: saturated 100% - 85%

Green light flashes: sufficient 85% - 50%

Red light on: poor 50% - 25% Red light flashes: critical 25% - 1%

Note: This only works with Fenix ARR-I 21-5000 battery

## INTELLIGENT OVERHEAT PROTECTION

The light will accumulate a lot of heat when used at a relatively high mode for extended periods. When the light reaches a temperature of 60°C or above, the light will automatically step down a few lumens to reduce the temperature. When the temperature drops below 60°C, it will then allow the user for the reselection of the mode

#### INTELLIGENT PROTECTION

#### Intelligent Downshift

When the voltage level drops below the preset level, the flashlight is programmed to downshift to a lower brightness level until Eco mode is

Low-voltage Warning When the voltage remains low in Eco mode, the light blinks three times every five minutes to remind you to timely recharge or replace the

Note: This only works with Fenix ARB-L21-5000 battery.

#### USAGE AND MAINTENANCE

- O Disassembling the sealed head can cause damage to the light and will void the warranty
- O Fenix recommends using only a high-quality protected battery.
- O If the light will not be used for an extended period, remove the battery for proper storage.
- O Lock the light or remove the battery to prevent accidental activation during storage or transportation.
- O Long-term use can result in O-ring wear. To maintain a proper water seal, replace the ring with an approved spare.
- © Periodic cleaning of the battery contacts improves the light's performance as dirty contacts may cause the light to flicker, shine intermittently or even fail to illuminate for the following reasons:
- A: Poor battery level Solution: Recharge battery.
- B: The contact or contact point of the battery or flashlight is dirty. Solution: Clean the contact points with a cotton swab soaked in rubbing

If the above methods don't work, please contact your authorized

#### INCLUDED

Fenix C7 flashlight, ARB-L21-5000 rechargeable Li-ion battery, USB Type-C charging cable, Lanyard, Spare O-ring, User manual, Warranty

### **⚠WARNING**

©The flashlight is a high-intensity lighting device capable of causing eye damage to the user or others. Avoid shining the light directly into

O This flashlight will accumulate a lot of heat when used for extended

periods, resulting in a high temperature of the flashlight shell. Pay attention to safe use to avoid scalding. ©Do not shine an object at close range, to avoid burning the object or causing danger due to high temperature.

The LED of this flashlight is not designed to replaceable; so the entire

light should be replaced when the LED reaches the end of its life.

Olf any of the information provided in this manual is changed, the new version of the manual shall prevail; if your included user manual is an old one, it acquiesces that we won't send a new manual.